

Document Title: **NEGATIVE SWITCHING IQ/IQT REMOTE CONTROL CIRCUITRY + FOLOMATIC (24VDC)**

THE INFRA RED SETTING TOOL ENABLES ALL CONFIGURABLE ACTUATOR SETTINGS TO BE MADE.

BEFORE PUTTING THE ACTUATOR INTO SERVICE, IT MUST BE INSTALLED AND COMMISSIONED IN ACCORDANCE WITH PUBLICATION E170E (IQ) or E175E (IQT) INSTALLATION AND MAINTENANCE INSTRUCTIONS.  
UNLESS SPECIFIED WITH ORDER, THE ACTUATOR IS DESPATCHED WITH DEFAULT SETTINGS AS LISTED IN PUBLICATION E170E (IQ) or E175E (IQT).

FOR IQ/IQT CONTROL AND MONITORING FACILITIES, REFER TO PUBLICATION E120E.

**NOTE:**  
ACTUATOR REMOTE CONTROL SIGNALS MAY BE INTERNALLY OR EXTERNALLY SUPPLIED.

**INTERNALLY SUPPLIED:**  
# FIT LINK '#' AS SHOWN AND CONNECT REMOTE CONTROL CONTACTS TO INTERNAL SUPPLY ON TERMINAL 5.

**EXTERNALLY SUPPLIED:**  
CONNECT REMOTE CONTROL CONTACTS TO EXTERNAL SUPPLY ZERO/-VE. CONNECT SUPPLY LIVE/+VE AS FOLLOWS:-  
TO TERMINAL 36 & 31 FOR SUPPLIES UP TO 60VAC or DC  
TO TERMINAL 40 & 32 FOR SUPPLIES UP TO 125VAC or DC  
CONNECT FOLOMATIC CONTROL CONTACTS TO EXTERNAL SUPPLY LIVE/+VE. CONNECT SUPPLY ZERO/-VE AS FOLLOWS:-  
TO TERMINAL 41 FOR SUPPLIES UP TO 60VAC or DC  
TO TERMINAL 45 FOR SUPPLIES UP TO 120VAC

